






INSTRUCTIONS

THIS MACHINE IS ONLY INTENDED TO FASTEN TOGETHER FROM TWO TO TEN SHEETS OF PAPER

- DON'T**  Try to Fasten Together More Than TEN (10) Sheets of Paper
- DON'T**  Try to Fasten Together All the Leaves of a Book or Magazine
- DON'T**  Try to Fasten Together Sheet Metal.
- DON'T**  Try to Fasten Together Stiff Card Board.
- DON'T**  Try to Fasten Together Leather, Etc. Etc.

FOR SUCH IS NOT THE PURPOSE OF THE FASTENER

The Machine is built only for the purpose of fastening not to exceed ten sheets
Paper of Ordinary Thickness.

THIS IS POSITIVELY ALL THAT WE GUARANTEE THE MACHINE TO DO

HOW TO OPERATE THE FASTENER

Insert the sheets of paper below the plunger until they project back about one fourth inch. Now strike the top of the plunger a quick decided blow with the hand to bring the plunger clear down. Upon the reaction of the plunger, pull the paper straight out, and you will find it perfectly fastened together. If the plunger does not react, fully releasing the paper, strike the top of the plunger a light blow and it will react, releasing the paper. **EXPERIMENT** a little on from 4 to 6 to 8 sheets of paper, and you will become expert in the use of the machine.

WARRANTY

tive parts free of charge.

Based upon the above instructions, we guarantee the **CLIPLESS PAPER FASTENER** in all its parts and will either replace a defective machine or the defec-

CLIPLESS PAPER FASTENER CO., Newton, Iowa