


# DIRECTIONS

---

## OPERATION, LOADING AND CARE OF ACME No. 2 STAPLE BINDER

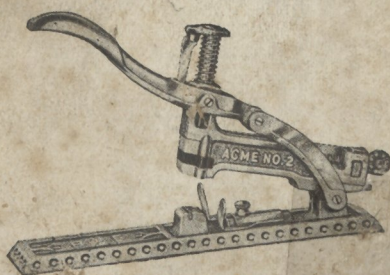

ACME No. 2 BINDER



USE No. 18 STAPLES IN THIS MACHINE

**TO OPERATE:**—Adjust gauge by thumb-screw to obtain distance desired from staple to edge of paper or cloth. Press lever firmly **all the way, and remove work.** See that lever is allowed to return to original position before driving another staple.

**TO LOAD:**—When machine is **entirely empty**, turn knob at back of machine to left and remove “pusher” entirely. Insert core and re-hook “pusher.” Machine is then ready to operate.

**THE ACME No. 2 cannot clog if directions are followed.** Should this trouble arise, first try pressing lever all the way without allowing magazine to touch the anvil. The clogged staple will generally drop out. **Do not, first remove “pusher”** as above explained and then remove face-plate of the magazine, thus allowing staple to escape. In replacing face-plate, be sure beveled end is downward. Then reinsert and fasten “pusher” as before.

# SUPPLY PART CHART FOR ACME No. 2 BINDER

ORDER PARTS BY SYMBOL AND NUMBER

