


How to Use

WARDS STAPLING MACHINE




TO LOAD

- Push lever (arrow) forward and lift head all the way back.
- Drop staples into the staple slot so that they fit into the narrow side grooves.
- Bring the head forward. This pushes staples to the front. The lever locks automatically.

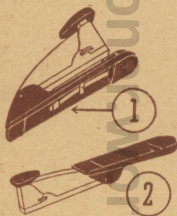

TO TACK

- Press latch (1) on under side of base.
- Swing entire head back into position for tacking, as shown by (2).

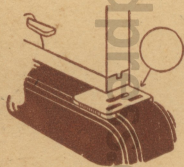

TO ADJUST FASTENING

- For temporary fastening (staple legs bent out), push anvil (arrow) backward.
- For permanent fastening (staple legs bent in), push anvil forward.

MONTGOMERY WARD