

# INSTRUCTIONS for SHOP — N — ADD

1. Clear machine by dialing each circle clockwise **O** beginning with cents, until each window on upper right of dials shows zero.
2. To add, place metal pin in holes next to numbers of each dial which are to be added, starting with dollars and turn dial clockwise until you come to stop.

For example, if you add \$1.56 to the total, add

1 in the circle marked dollars

5 in the circle marked dimes

6 in the circle marked cents

After you have reached \$9.99, your machine will automatically start on "O" again.

**Giftcraft, Inc.**      **Providence 3, R. I.**